

## Package Contents

\* Per camera in multi-camera packs

- HD Wire-Free Security Cameras
- Camera Mounting Kit\*
- Rechargeable Power Pack\*
- Camera Antenna\*
- Allen Key
- Power Pack Adapter

## Safety Precautions

- Read this guide carefully and keep it for future reference.
- Follow all instructions for safe use of the product and handle with care.
- Use the camera within given temperature, humidity and voltage levels noted in the camera's specifications.
- Do not disassemble the camera.
- Do not point the camera directly towards the sun or a source of intense light.
- Use only the supplied regulated power supply provided with the product or compatible accessories. Use of a non-regulated, non-conforming power supply can damage the product and void the warranty.
- Periodic cleaning may be required. Use a damp cloth only. Do not use any harsh, chemical-based cleaners.

## Available Accessories

The following accessories are available for purchase. Visit [lorex.com](http://lorex.com) and search for the model numbers below for details:



 
COLOR	Extra Power Pack Power Adapters	2-cell Accessory Power Pack	3-cell Accessory Power Pack PLUS	Solar Panel
WHITE	ACPWF1	ACBATT2	ACBATT3	ACSOLIB*
BLACK	ACPWFBK1	ACBATTR2	ACBATTR3	


\* Compatible with select Wire-Free cameras only. Visit [lorex.com/compatibility](http://lorex.com/compatibility) for details.

## Optimizing Motion Detection

Customize motion detection settings to ensure motion events are being recorded and reduce false alarms.

**To optimize motion detection:**


1. Launch the **Lorex Cirrus** app.
2. Tap a channel in Live View to select it.
3. Tap  then tap **Motion**.
4. Configure the following as needed:
  - a. **Sensitivity:** The amount of motion needed to trigger recording (e.g., higher sensitivity requires less motion to trigger recording).
  - b. **Area Selection:** Not supported.
  - c. **Distance Setting:** Configure distance setting for motion detection. While watching the camera's video on your mobile device, recreate a motion event in front of your camera. The icon will change from  to  when motion is detected by the camera. Change the distance setting if motion detection is being triggered by unwanted events.  
**NOTE:** Distance will be affected by temperature.
  - d. **Buzzer:** Set the recorder to sound an alarm when motion is detected.
5. Tap **Save**. Repeat for other cameras on the system.

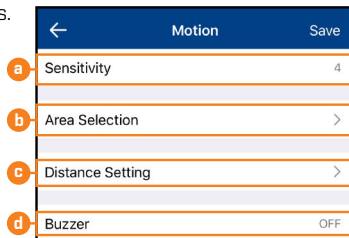 

## Installation Tips

Follow the tips below for more accurate motion detection and to optimize battery life:

 - **See images to the right for ideal setup.** It is recommended to place your camera at least 7ft (2.1m) above the ground and angle it slightly downward toward the monitoring area, excluding any busy areas (e.g., sidewalks or roadways).
- Ensure the camera image is free of obstructions (i.e., tree branches).
- Position the camera no more than 20ft (6.1m) away from the area you wish to monitor.
- See the "Optimizing Motion Detection" section to customize motion settings for each camera on your system.
- For best performance, position the camera so that objects of interest will move from side-to-side across the camera image, rather than moving towards or away from the camera.
- Install the camera within range of the recorder (noted in the camera's specifications).
- This camera is weather resistant for outdoor use (IP66 rated). Installation in a sheltered location is recommended.
- **Battery life will vary based on temperature, settings and number of events.**

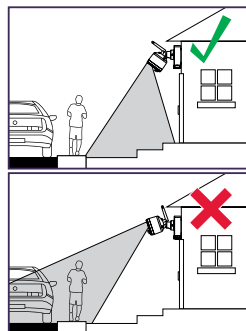

## Disclaimers

- For a full list of compatible recorders, visit [lorex.com/compatibility](http://lorex.com/compatibility).
- Not intended for submersion in water. Installation in a sheltered location recommended.

# LOREX<sup>®</sup>

## HD Wire-Free Add-On Camera

Quick Start Guide  
English Version 1.0



## LWB5800 / LWB6800 SERIES

[lorex.com](http://lorex.com)

Copyright © 2019 Lorex Corporation

As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E80E. All rights reserved.

LWB5800\_LWB6800\_QSG\_EN\_R1


## STEP 1: Initial Setup

Before you begin, you will need to prepare the wire-free cameras and Power Packs.

**NOTE:** Power Packs come fully charged with no need for initial charging.


### To prepare the cameras:

 1. Attach an antenna to each camera.

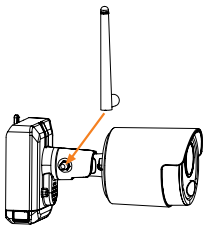

2. Peel off the **PLEASE REMOVE** label covering the contacts on each Power Pack. Insert the charged Power Packs into each camera base. Push up until the Power Pack 'clicks' into place.

 **NOTE:** The camera will 'beep' when the Power Pack is properly inserted. If you do hear this alert, remove the Power Pack by pushing on the release tabs then re-insert.

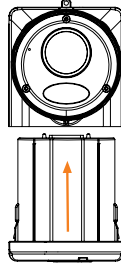


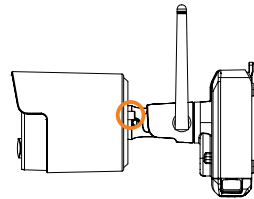 
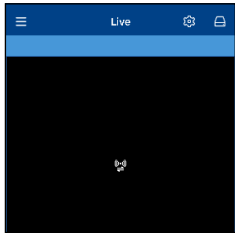 
## STEP 2: Pairing with Lorex Cirrus

Pair your add-on camera to your recorder using the free Lorex Cirrus app for smartphones and tablets (iOS and Android).

**NOTE:** Make sure the camera is within 3ft (1m) of the recorder.

### To pair the camera with Lorex Cirrus:

1. From Live view, tap any free channel you would like to pair a camera to (marked with a  icon).
2. Tap **PAIR**. A timer for 30 seconds appears.
3. Press and hold the pair button on the back of the camera for 3 seconds.



 
**NOTE:** A "pairing successful" message should appear on screen. If you do not see this message, repeat the steps above.

## STEP 3: Installing the Cameras


Follow the instructions below to mount the cameras. It is recommended that you refer to the "Installation Tips" section to help you select good mounting locations.

### To install your cameras:

1. Set the mounting bracket in the desired mounting position. Mark holes through the mounting bracket (shown as orange X's on the right).
2. Drill holes where marked for the mounting screws using the included drill bit (item C provided in the toolkit with your wire-free system).

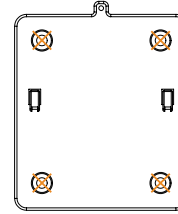

 
3. Secure the bracket to the mounting surface with the included mounting screws (x4). Make sure all screws are fastened tightly using the included screwdriver (item A+B provided in the toolkit with your wire-free system).

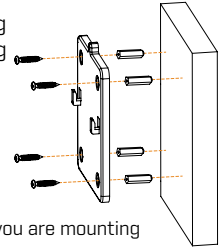


#### NOTES:

- Insert the included drywall anchors if you are mounting the camera onto drywall.
- The hole at the top of the mounting bracket will be used in step 5, once the camera is attached to the mounting plate.

 4. Lower the camera base onto the mounting bracket so the 2 tabs in the mounting bracket lock into the 2 slots in the camera base.

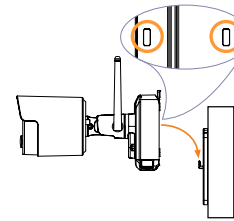


 5. Insert the security screw through the fasteners on the top of the camera base and mounting bracket to secure the camera to the mounting bracket. Tighten using the included screwdriver (item A+B provided in the toolkit with your wire-free system).

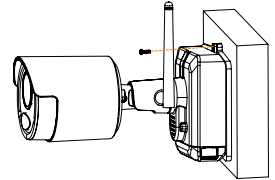


6. **OPTIONAL:** Tighten the pre-installed locking screw on the base of the Power Pack using the included screwdriver (item A+B provided in the toolkit with your wire-free system).

 
**NOTE:** You will need to loosen the locking screw to remove the Power Pack in the future.



 7. Adjust the angle of the camera. Use the included Allen Key to loosen the adjustment screws labelled below. Tighten all adjustment screws when finished.

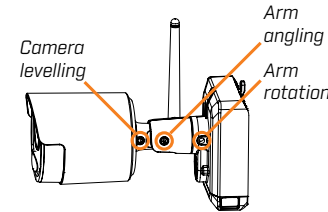

 **NOTE:** If you are angling the camera down and to the right, position the antenna as shown to the right.

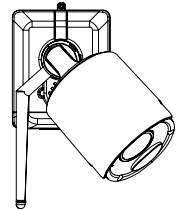

8. **OPTIONAL:** Use the included cable clips to complete the installation. Remove the protective strip to uncover the adhesive on the cable clip to attach to the mounting surface.

